# 22-41093, 22-41103

Kenmore Elite 30-Inch Dual-Fuel Slide-In Range

○ Stainless with Black Surface 22-41093
● Stainless with Stainless Surface 22-41103

- 4.2 cu. ft. Flex Clean self-clean oven
- True convection with 2,500W third element
- True hidden bake element
- Sabbath mode (certified)
- Two heavy-duty, porcelain-coated, cast-iron, integrated handle racks
- One porcelain-coated cast-iron half rack
- Ceramic glass cooktops (41103: stainless surface)
- One 900–18,000 BTU dual ring power burner
- One 9,500 BTU all -purpose burner
- 21,000 BTU power bridge burner with three 7,000 BTU burners
- One 5,000 BTU simmer burner
- Warm & Ready™ drawer
- Easy Set™ 575 glass tap touch oven controls
- Stainless door with x-large window
- Two halogen interior lights
- Cast metal knobs
- Includes rear top filler kit

| Model | 22-41093 | 22-41103 |
|---|---|---|
| Overall | Stainless | Stainless |
| Console | Black | Black |
| Knobs | Stainless | Stainless |
| Door / Drawer | Stainless | Stainless |
| Handle | Stainless | Stainless |
| Surface | Black | Stainless |
| Grates | Black Matte | Black Matte |

| SELECTION | ELITE |
|---|---|
| Stainless with Black Surface | 22-41093 |
| Stainless with Stainless Surface | 22-41103 |
| **OVEN FEATURES** | **SELF-CLEAN** |
| Oven Capacity (cu. ft.) | 4.2 |
| Variable Time Self-Cleaning | Flex Clean, 2–4 Hours |
| Electronic Oven Controls | Glass Tap Touch Easy Set™ 575 w/Blue LED |
| Lockout | Oven Door & Control |
| Food Category Convenience Pads | • |
| Convection with Third Element | True |
| Auto Convection Conversion | • |
| Temperature Recall | • |
| Cook & Hold Warm Oven | • |
| Delay Start | Cook & Clean |
| Automatic Oven Shutoff | • |
| Sabbath Mode* | Certified |
| Hidden Bake Element | True |
| Variable Broiling System | Advanced, 400 – 550° |
| Total Adjustable Oven Racks | 2 Heavy-Duty, Porcelain-Coated Cast-Iron |
| Half Rack | 1 Porcelain-Coated Cast-Iron |
| Integrated Handle Racks | 2 |
| Oven Light | 2 Halogen (Auto & Manual) |
| Removable Glass Door | Stainless |
| Window | X-Large |
| Oven Interior W x H x D (in.) | 24 1/8 x 16 1/2 x 18 1/32 |
| **COOKTOP FEATURES** | **SEALED** |
| Power Bridge Burner | 1 @ 21,000 |
| Power Burner (BTU) | 1 @ 900–18,000 Dual Ring |
| All-Purpose Burner (BTU) | 1 @ 9,500 |
| Simmer Burner (BTU) | 1 @ 5,000 |
| Cooktop Surface | Ceramic Glass (41103: Stainless Surface) |
| Dishwasher-Safe Grates | • |
| Cast Metal Knobs | • |
| **GENERAL FEATURES** | |
| Oven Door Handle Material | Metal |
| Drawer | Warm & Ready™ |
| Storage Drawer Handle Material | Metal |
| Electronic Ignition | • |
| Convertible to LP | Kit Included† |
| Power Rating (kW) @ 240V / 208V | 4.9 / 3.7 |
| Bake / Broil @ 240V (Watts or BTU / Hr.) | 2,500 / 4,000 |
| Bake / Broil @ 208V (Watts) | 1,875 / 3,000 |
| Convection @ 240V (Watts) | 2,500 |
| Breaker / Copper Wire Size (240V)** | 40 / 8 |
| Item Weight (Approx. Lbs.) | 211 |
| Shipping Weight (Approx. Lbs.) | 220 |
| **ACCESSORIES** | |
| Side Trim Kit – Black | 22-628-903075-9010 |
| Side Panel Kit – Black | 22-628-903066-9010 |
| Backguard – Black | 22-628-903046-9010 |
| Leveling Leg Extension Kit | 22-628-903065-9010 |
| Rear Top Filler Kit | Included |
| Gas Connector Required | 22-49694 |
| Range Cord Required | • |
| **WARRANTY** | |
| 1-Year Limited Warranty – Entire Appliance | Parts & Labor |
| 2–5-Year Limited Warranty – Glass Cooktop, Cooktop Elements | Parts |

If used for other than private family purposes, warranty applies for only 90 days.
*Sabbath Mode overrides auto oven shutoff
**Always consult local and national electrical codes
†LP orifices included; conversion must be done by a qualified LP installer



Sears Commercial

Due to Sears policy of continuous improvement on its products, Sears reserves the right to change materials and specifications without notice. Before installing, consult installation instructions packed with product for current dimensional and installation data.

## COUNTERTOP PREPARATION

The cooktop sides of the range fit over the cutout edge of your countertop. **Countertop must be level.**

If you have a **square finish (flat) countertop**, no countertop preparation is required. Cooktop sides lay directly on edge of countertop.

**Formed front-edged countertops** must have molded edge shaved flat 3/4" from each front corner of opening.

**Tile countertops** may need trim cut back 3/4" from each front corner and/or rounded edge flattened.

**If the existing cutout width is greater than 30 1/16"**, reduce the 3/4" dimension.

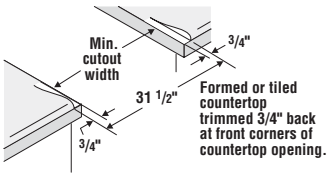


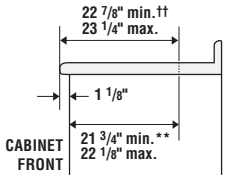


††For cutouts below 22 7/8", applaince will slightly show out of the cabinet.

****Note:** Minimum cutout depth is increased to 24" with optional backguard.

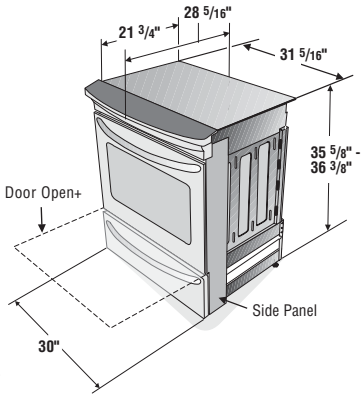


**Note:** Rear Top Filler Kit ships with product

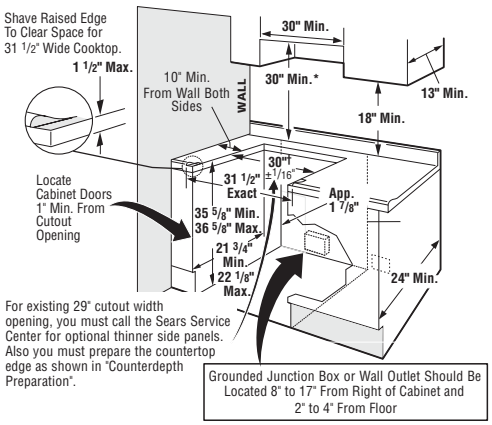
Shave Raised Edge To Clear Space for 31 1/2" Wide Cooktop.
1 1/2" Max.
10" Min. From Wall Both Sides
WALL
30" Min.
30" Min.*
13" Min.
18" Min.
30" ±1/16"
31 1/2" Exact
App. 1 7/8"
Locate Cabinet Doors 1" Min. From Cutout Opening
35 5/8" Min.
36 5/8" Max.
21 3/4" Min.
22 1/8" Max.
24" Min.
For existing 29" cutout width opening, you must call the Sears Service Center for optional thinner side panels. Also you must prepare the countertop edge as shown in "Counterdepth Preparation".
Grounded Junction Box or Wall Outlet Should Be Located 8" to 17" From Right of Cabinet and 2" to 4" From Floor

Do not pinch the power supply cord or flexible gas conduit between the range and the wall.

Do not seal the range to the side cabinets.

***Note:** 24" min. clearance between the cooktop and the bottom of the cabinets when the bottom of the wood or metal cabinet is protected by not less than 1/4" flame retardant millboard covered with not less than No. 28 MSG sheet metal, 0.015" stainless steel, 0.024" aluminum, or 0.020" copper. 30" min. clearance when the cabinet is unprotected.

**†Note:** To avoid cooktop glass breakage for cutout with more than 30 1/16", make sure appliance is centered in the counter opening while pushing it in. Raise leveling legs at maximum position, insert the appliance in the counter and then level. Make sure the unit is supported by the the leveling legs and not by the cooktop glass itself.

+Allow at least 19 1/4" clearance for door depth when it is open.

22-49614, 22-49616

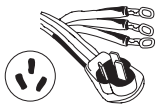

### RANGE CORD REQUIRED

| Order | Wire | Length |
|---|---|---|
| 22-49614 | 3 | 4 ft. |
| 22-49616 | 3 | 6 ft. |
| 22-49624* | 4 | 4 ft. |
| 22-49626* | 4 | 6 ft. |

22-49624, 22-49626

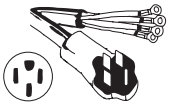

*Complies with 1/1/96 NEC code revision for new construction and remodeling

### GAS CONNECTOR REQUIRED

| Gas Connector–Stainless Steel | |
|---|---|
| 22-49694 | 60" Length 1/2" I.D. |

All ranges are equipped with an Anti-Tip device. The installation of this device is an important, required step in the installation of the range.

### ACCESSORIES (OPTIONAL)

Call Sears Parts at 1-800-225-2864.

### SIDE TRIM KIT

For existing 29" wide cutout, you must order these new and smaller side / trim panels. Refer to the installation manual for additional considerations.

22-628-903075-9010 – Black

### SIDE PANEL KIT

Includes two full size (right and left) panels.
NOTE: Product is shipped with 4 1/2" min. width panels. Order this full size kit as needed.

22-628-903066-9010 – Black

### BACKGUARD

22-628-903046-9010 – Black

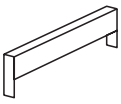

### LEVELING LEG EXTENSION KIT

22-628-903065-9010



Due to Sears policy of continuous improvement on its products, Sears reserves the right to change materials and specifications without notice. Before installing, consult installation instructions packed with product for current dimensional and installation data.